

ELECTRIC TAILGATE FOR AUDI A3/S3 SPORBACK

2013-2020

How to use:

	Original tailgate hand buckle button	Tailgate button	Key remote control	The original tailgate button of the main driver
Open the tailgate	Click	/	Long press the tailgate button	Long Press
Close the tailgate	/	Click	Long press the tailgate button	Click


*The installation instructions may differ slightly from the actual operation. If they are different, please operate according to the actual situation or contact us.

1: Height Adjustment

Adjust the tailgate to the appropriate height, press and hold the tailgate button for 5 seconds, and a long beep indicates that the height setting is successful. When it is opened again, it will open to the set height.

2: Speed Adjustment

The tailgate opening and closing speed is divided into 5 gears, with 4 gears by default, 2 gears as the lowest, and 6 gears as the highest. Press and hold the tailgate button, and when you hear the buzzer sound twice in a row, it means that the speed setting is successful at gear 2. When you hear the buzzer sound three times in a row, it means that the speed setting is successful at gear 3, and so on.

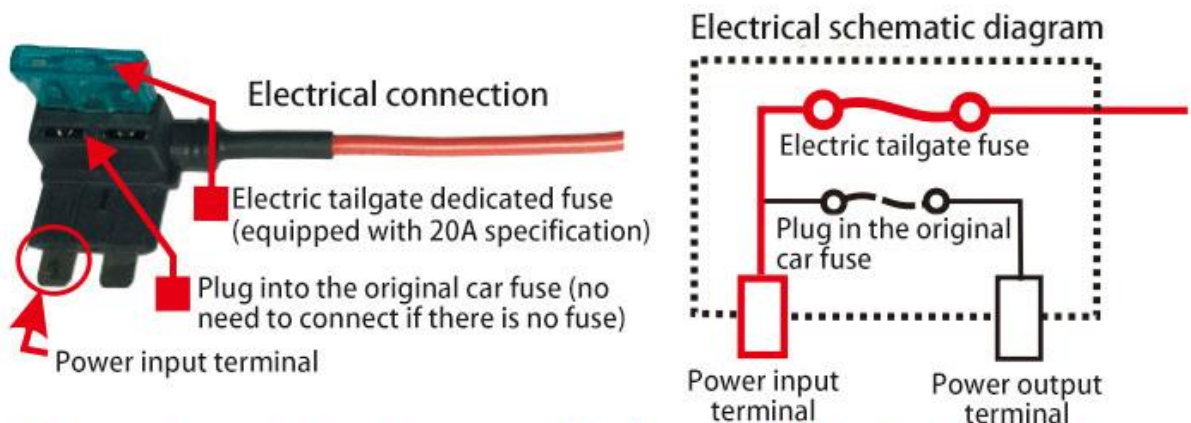

**The power input terminal must be connected to the live terminal of the original car's normal power fuse hole. If connected in reverse, the original car's fuse will be blown due to overcurrent. Before installation, be sure to use a tester to measure and determine the power input terminal. The current flow is shown by the red line in the schematic diagram.

» » Installation Steps

1. Remove the original car trim panel as indicated by the arrow in the figure below.



2. Remove the original car trim panel as indicated by the arrow in the figure below.



3. Use a flathead screwdriver to lift up the ball head steel sheet and remove the left and right strut of the original vehicle.



4. Remove the original car door ball head and install our matching ball head (same for left and right)




5. Schematic diagram of the electric strut installation (Note: After the strut is installed, please check whether the strut ball head card is in place and the strut line is facing the car door)




6. Use the hole opener to make a hole 20 at the circled area in the picture below, and pass the strut wire through (same for left and right)



7. Install the self-priming lock block. Remove the original car lock block and install our self-priming lock machine.

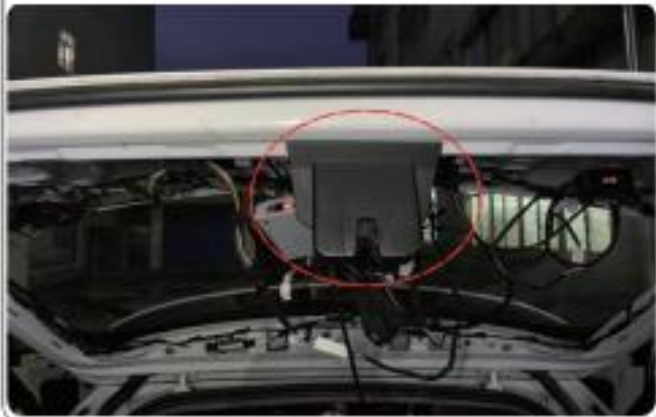

8. The lock block does not need to be connected to a plug. Unplug the original car lock block plug and plug it into the supplied three-way plug.

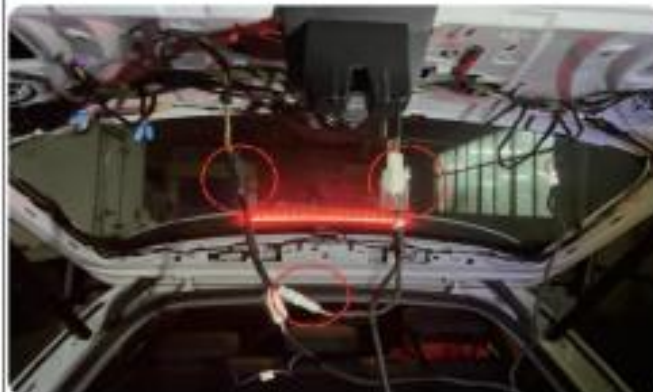

9. Ground wire location. Located inside the left side trim of the trunk



10. The location of the power supply is to find the fuse box under the main driving of the center console, and find the fuse in the position shown in the figure below. If you unplug the original car fuse, you must plug the fuse into our distribution power supply (Note: connect to 12V normal power and the fuse is above 20A)



11. Fix the controller on the tailgate door (see the position in the figure below)




12. Install the front button. Install the front button in the opening 20 of the main driver's panel in the figure below.




13. Install the rear button. Install the rear button in the tailgate trim opening 20 as shown below.



14. Schematic diagram of wiring diagram

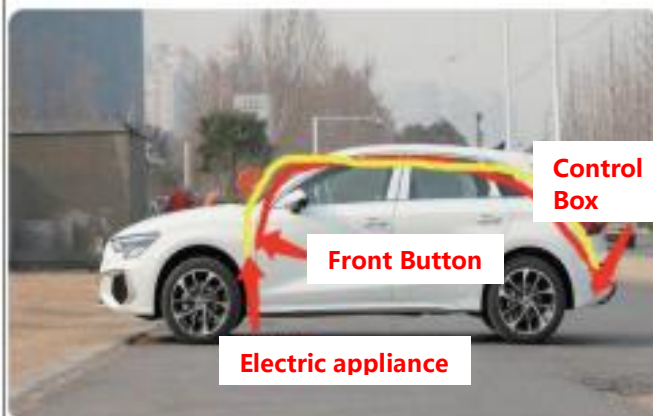

15. Schematic diagram of wiring diagram

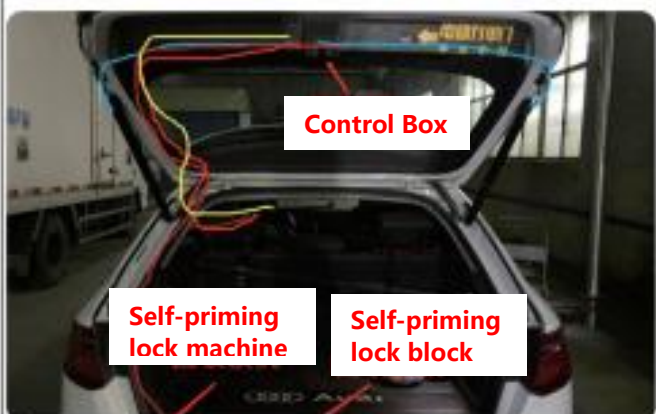

16. The hand buckle line is not connected



Connection Line Diagram

**This picture is for reference only, the actual product shall prevail

